turn on the projector

Aim remote at the front or back of the projectors and Press the Power button

*Projector will take a few minutes to warm up

select source

DVI=av switcher inputs D-SUB=vga connection



TURN OFF THE PROJECTOR WHEN YOU ARE FINISHED

changing inputs

Locate the av switcher and press the "select" button until the correct input number is lit. 1=Notebook 2=Airplay Apple TV



sound

For sound press power button far left to turn on.



Rotate the far right circular knobs to adjust volume.

> av help 941-359-7633 | avservices@ringling.edu

airPlay

Press the ATV button on the switcher

Bring up the control center on your device by swiping up from the bottom area just below the dock



Tap the 🖵 AirPlay button and select Apple TV CJ106. Slide Mirroring to "ON"

	AirPlay V CJ105	Done
	V CJ106	~
Mirroring		O
Apple TV	CJ107	
Apple TV	CJ108	
Apple TV	Gold 103 (4)	
Apple TV	Selby	
Auditoriu	m	
Bayou 10	13	
Bayou 10	17	
🔄 Bayou 11	0	
Bookstor	e 115	

If this is your first time using the apple tv you will be prompted to enter a password. Contact avservices@ringling.edu if you need the password.

When finished turn off AirPlay mirroring. From the AirPlay menu and select iPhone or iPad to Turn Off AirPlay Mirroring.

QUICKSTART GUIDE

mac system preferences

If image isn't displaying properly launch System Preferences either from the dock or Apple Menu. Click the "Displays" icon under Hardware

● ○ ○ ◀ ▶ :	show All		System	Preferences	
Personal					
Mar Nor	1		\blacksquare	0	0
Appearance	Desktop & Screen Saver	Dock	Exposé & Spaces	International	Secur
Hardware					
8		(🔳)	\odot	5	1
Bluetooth	CDs & DVDs	Displays	Energy Saver	Keyboard & Mouse	Print &
Internet &	Network	-			

To clone your desktop image to the projector check "Mirror Displays" under the arrangement tab. If you do not have an arrangement tab click hold down the auoption key while you are in the display pane.

00	9	DNY TV	
◄ ► Show All			Q
To rearrange the displays, do To relocate the menu bar, dra	ag them to the desired	position. lay.	
Mirror Displays			

Adjust Resolution If necessary, select the Display tab & choose 1280x720 or 1280x768.

troubleshooting

If the projected image is green, pink or just acting "odd". Restart the switcher by unplugging the power cord for approximatly one minute.



